


BULLETIN, No. 21.

Distance of exhaust valve flange at cylinder to piston

Turn crankshaft until the piston just closes the exhaust port.
Insert the exhaust valve gauge (Rotax 277030) as shown in the picture until it stops at the flange.

At the circular contact area between exhaust valve and the flange of the cylinder, a feeler gauge 0,25 mm may not fit between the gauge and the flange.

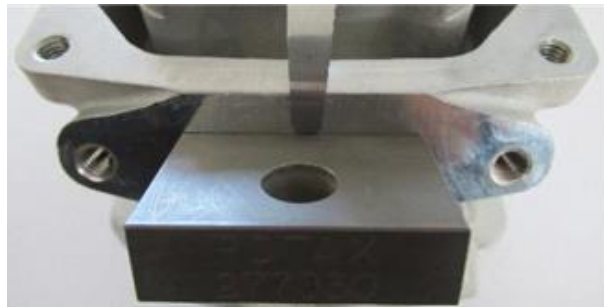

**Rotax Hungary,
Gokart Committee of the Hungarian ASN
CEE Organizers**
Posted on the info board by the official race secretary.
Trinec race (30.08.2019)